



## OVP Guide to Using Processor Models

### Model specific information for SiFive\_E76

Imperas Software Limited  
Imperas Buildings, North Weston  
Thame, Oxfordshire, OX9 2HA, U.K.  
docs@imperas.com



Author	Imperas Software Limited
Version	20220722.0
Filename	OVP_Model_Specific_Information_sifive_riscv_E76.pdf
Created	27 July 2022
Status	OVP Standard Release

## Copyright Notice

Copyright (c) 2022 Imperas Software Limited. All rights reserved. This software and documentation contain information that is the property of Imperas Software Limited. The software and documentation are furnished under a license agreement and may be used or copied only in accordance with the terms of the license agreement. No part of the software and documentation may be reproduced, transmitted, or translated, in any form or by any means, electronic, mechanical, manual, optical, or otherwise, without prior written permission of Imperas Software Limited, or as expressly provided by the license agreement.

## Right to Copy Documentation

The license agreement with Imperas permits licensee to make copies of the documentation for its internal use only. Each copy shall include all copyrights, trademarks, service marks, and proprietary rights notices, if any.

## Destination Control Statement

All technical data contained in this publication is subject to the export control laws of the United States of America. Disclosure to nationals of other countries contrary to United States law is prohibited. It is the readers responsibility to determine the applicable regulations and to comply with them.

## Disclaimer

IMPERAS SOFTWARE LIMITED, AND ITS LICENSORS MAKE NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

## Model Release Status

This model is released as part of OVP releases and is included in OVPworld packages. Please visit [OVPworld.org](http://OVPworld.org).

# Contents

<b>1</b>	<b>Overview</b>	<b>1</b>
1.1	Description	1
1.2	Licensing	1
1.3	Extensions	2
1.3.1	Extensions Enabled by Default	2
1.3.2	Enabling Other Extensions	2
1.3.3	Disabling Extensions	3
1.4	General Features	3
1.4.1	Multicore Features	3
1.4.2	mtvec CSR	3
1.4.3	Reset	3
1.4.4	NMI	4
1.4.5	WFI	4
1.4.6	cycle CSR	4
1.4.7	instret CSR	4
1.4.8	hpmcounter CSR	4
1.4.9	time CSR	4
1.4.10	mcycle CSR	4
1.4.11	minstret CSR	5
1.4.12	mhpmcounter CSR	5
1.4.13	Unaligned Accesses	5
1.4.14	PMP	5
1.4.15	LR/SC Granule	5
1.5	Compressed Extension	6
1.6	Floating Point Features	6
1.7	Privileged Architecture	7
1.7.1	Legacy Version 1.10	7
1.7.2	Version 20190608	7
1.7.3	Version 20211203	7
1.7.4	Version 1.12	7
1.7.5	Version master	7
1.8	Unprivileged Architecture	8
1.8.1	Legacy Version 2.2	8
1.8.2	Version 20191213	8
1.9	Other Extensions	8
1.9.1	Zmmul	8
1.9.2	Zicsr	8

1.9.3	Zifencei . . . . .	8
1.9.4	Zicbom . . . . .	9
1.9.5	Zicbop . . . . .	9
1.9.6	Zicboz . . . . .	9
1.9.7	Smstateen . . . . .	9
1.10	Load-Reserved/Store-Conditional Locking . . . . .	9
1.11	Active Atomic Operation Indication . . . . .	10
1.12	Interrupts . . . . .	10
1.13	Debug Mode . . . . .	11
1.13.1	Debug State Entry . . . . .	12
1.13.2	Debug State Exit . . . . .	12
1.13.3	Debug Registers . . . . .	12
1.13.4	Debug Mode Execution . . . . .	12
1.13.5	Debug Single Step . . . . .	13
1.13.6	Debug Event Priorities . . . . .	13
1.13.7	Debug Ports . . . . .	13
1.14	Debug Mask . . . . .	13
1.15	Integration Support . . . . .	14
1.15.1	CSR Register External Implementation . . . . .	14
1.15.2	LR/SC Active Address . . . . .	14
1.15.3	Artifact Register “fflags_i” . . . . .	14
1.16	Limitations . . . . .	14
1.17	Verification . . . . .	15
1.18	References . . . . .	15
<b>2</b>	<b>SiFive-Specific Extensions</b>	<b>16</b>
2.1	SiFive-Specific CSRs . . . . .	16
2.1.1	featureDisable (csr num 0x7c1) . . . . .	16
2.2	SiFive-Specific Instructions . . . . .	16
2.2.1	CFLUSH.D.L1 . . . . .	16
2.2.2	CDISCARD.D.L1 . . . . .	17
<b>3</b>	<b>Configuration</b>	<b>18</b>
3.1	Location . . . . .	18
3.2	GDB Path . . . . .	18
3.3	Semi-Host Library . . . . .	18
3.4	Processor Endian-ness . . . . .	18
3.5	QuantumLeap Support . . . . .	18
3.6	Processor ELF code . . . . .	18
<b>4</b>	<b>All Variants in this model</b>	<b>19</b>
<b>5</b>	<b>Bus Master Ports</b>	<b>20</b>
<b>6</b>	<b>Bus Slave Ports</b>	<b>21</b>
<b>7</b>	<b>Net Ports</b>	<b>22</b>
<b>8</b>	<b>FIFO Ports</b>	<b>24</b>

<b>9</b>	<b>Formal Parameters</b>	<b>25</b>
9.1	Extension Parameters	28
9.2	Parameters with enumerated types	28
9.2.1	Parameter user_version	28
9.2.2	Parameter priv_version	28
9.2.3	Parameter compress_version	28
9.2.4	Parameter rnmi_version	29
9.2.5	Parameter mstatus_fs_mode	29
9.2.6	Parameter debug_mode	29
9.2.7	Parameter lr_sc_constraint	29
9.2.8	Parameter amo_constraint	29
9.2.9	Parameter Zfinx_version	29
9.2.10	Parameter Zcea_version	30
9.2.11	Parameter Zceb_version	30
9.2.12	Parameter Zcee_version	30
9.3	Parameter values	30
<b>10</b>	<b>Execution Modes</b>	<b>34</b>
<b>11</b>	<b>Exceptions</b>	<b>35</b>
<b>12</b>	<b>Hierarchy of the model</b>	<b>37</b>
12.1	Level 1: SMP	37
12.2	Level 2: Hart	37
<b>13</b>	<b>Model Commands</b>	<b>38</b>
13.1	Level 1: SMP	38
13.1.1	isync	38
13.1.2	itrace	38
13.2	Level 2: Hart	39
13.2.1	debugflags	39
13.2.2	getCSRIndex	39
13.2.3	isync	39
13.2.4	itrace	39
13.2.5	listCSRs	40
13.2.5.1	Argument description	40
<b>14</b>	<b>Registers</b>	<b>41</b>
14.1	Level 1: SMP	41
14.2	Level 2: Hart	41
14.2.1	Core	41
14.2.2	Floating_point	42
14.2.3	User_Control_and_Status	42
14.2.4	Machine_Control_and_Status	44
14.2.5	Integration_support	46

# Chapter 1

## Overview

This document provides the details of an OVP Fast Processor Model variant.

OVP Fast Processor Models are written in C and provide a C API for use in C based platforms. The models also provide a native interface for use in SystemC TLM2 platforms.

The models are written using the OVP VMI API that provides a Virtual Machine Interface that defines the behavior of the processor. The VMI API makes a clear line between model and simulator allowing very good optimization and world class high speed performance. Most models are provided as a binary shared object and also as source. This allows the download and use of the model binary or the use of the source to explore and modify the model.

The models are run through an extensive QA and regression testing process and most model families are validated using technology provided by the processor IP owners. There is a companion document (OVP Guide to Using Processor Models) which explains the general concepts of OVP Fast Processor Models and their use. It is downloadable from the OVPworld website documentation pages.

### 1.1 Description

RISC-V E76 32-bit processor model

### 1.2 Licensing

This Model is released under the Open Source Apache 2.0

## 1.3 Extensions

### 1.3.1 Extensions Enabled by Default

The model has the following architectural extensions enabled, and the corresponding bits in the `misa` CSR Extensions field will be set upon reset:

`misa` bit 0: extension A (atomic instructions)

`misa` bit 2: extension C (compressed instructions)

`misa` bit 5: extension F (single-precision floating point)

`misa` bit 8: RV32I/RV64I/RV128I base integer instruction set

`misa` bit 12: extension M (integer multiply/divide instructions)

`misa` bit 20: extension U (User mode)

To specify features that can be dynamically enabled or disabled by writes to the `misa` register in addition to those listed above, use parameter `“add_Extensions_mask”`. This is a string parameter containing the feature letters to add; for example, value `“DV”` indicates that double-precision floating point and the Vector Extension can be enabled or disabled by writes to the `misa` register, if supported on this variant. Parameter `“sub_Extensions_mask”` can be used to disable dynamic update of features in the same way.

Legacy parameter `“misa_Extensions_mask”` can also be used. This `Uns32`-valued parameter specifies all writable bits in the `misa` Extensions field, replacing any permitted bits defined in the base variant.

Note that any features that are indicated as present in the `misa` mask but absent in the `misa` will be ignored. See the next section.

### 1.3.2 Enabling Other Extensions

The following extensions are supported by the model, but not enabled by default in this variant:

`misa` bit 1: extension B (bit manipulation extension)

`misa` bit 3: extension D (double-precision floating point)

To add features from this list to the visible set in the `misa` register, use parameter `“add_Extensions”`. This is a string containing identification letters of features to enable; for example, value `“DV”` indicates that double-precision floating point and the Vector Extension should be enabled, if they are currently absent and are available on this variant.

Legacy parameter `“misa_Extensions”` can also be used. This `Uns32`-valued parameter specifies the reset value for the `misa` CSR Extensions field, replacing any permitted bits defined in the base variant.

To add features from this list to the implicitly-enabled set (not visible in the `misa` register), use parameter `“add_implicit_Extensions”`. This is a string parameter in the same format as the `“add_Extensions”` parameter described above.

### 1.3.3 Disabling Extensions

The following extensions are enabled by default in the model and can be disabled:

misa bit 5: extension F (single-precision floating point)

misa bit 12: extension M (integer multiply/divide instructions)

misa bit 20: extension U (User mode)

To disable features that are enabled by default, use parameter “sub\_Extensions”. This is a string containing identification letters of features to disable; for example, value “DF” indicates that double-precision and single-precision floating point extensions should be disabled, if they are enabled by default on this variant.

To remove features from this list from the implicitly-enabled set (not visible in the misa register), use parameter “sub\_implicit\_Extensions”. This is a string parameter in the same format as the “sub\_Extensions” parameter described above.

## 1.4 General Features

### 1.4.1 Multicore Features

This is a multicore variant with 1 harts by default. The number of harts may be overridden with the “numHarts” parameter.

### 1.4.2 mtvec CSR

On this variant, the Machine trap-vector base-address register (mtvec) is writable. It can instead be configured as read-only using parameter “mtvec\_is\_ro”.

Values written to “mtvec” are masked using the value 0xfffffd. A different mask of writable bits may be specified using parameter “mtvec\_mask” if required. In addition, when Vectored interrupt mode is enabled, parameter “tvec\_align” may be used to specify additional hardware-enforced base address alignment. In this variant, “tvec\_align” defaults to 64.

If parameter “mtvec\_sext” is True, values written to “mtvec” are sign-extended from the most-significant writable bit. In this variant, “mtvec\_sext” is False, indicating that “mtvec” is not sign-extended.

The initial value of “mtvec” is 0x0. A different value may be specified using parameter “mtvec” if required.

### 1.4.3 Reset

On reset, the model will restart at address 0x0. A different reset address may be specified using parameter “reset\_address” or applied using optional input port “reset\_addr” if required.



#### 1.4.4 NMI

On an NMI, the model will restart at address 0x0; a different NMI address may be specified using parameter “nmi\_address” or applied using optional input port “nmi\_addr” if required. The cause reported on an NMI is 0x2 by default; a different cause may be specified using parameter “ecode\_nmi” or applied using optional input port “nmi\_cause” if required.

If parameter “rnmi\_version” is not “none”, resumable NMIs are supported, managed by additional CSRs “mnscratch”, “mnepc”, “mncause” and “mnstatus”, following the indicated version of the Resumable NMI extension proposal. In this variant, “rnmi\_version” is “0.2.1”.

The NMI input is level-sensitive. To instead specify that the NMI input is latched on the rising edge of the NMI signal, set parameter “nmi\_is\_latched” to True.

#### 1.4.5 WFI

WFI will halt the processor until an interrupt occurs. It can instead be configured as a NOP using parameter “wfi\_is\_nop”. WFI timeout wait is implemented with a time limit of 0 (i.e. WFI causes an Illegal Instruction trap in Supervisor mode when mstatus.TW=1).

#### 1.4.6 cycle CSR

The “cycle” CSR is implemented in this variant. Set parameter “cycle\_undefined” to True to instead specify that “cycle” is unimplemented and accesses should cause Illegal Instruction traps.

#### 1.4.7 instret CSR

The “instret” CSR is implemented in this variant. Set parameter “instret\_undefined” to True to instead specify that “instret” is unimplemented and accesses should cause Illegal Instruction traps.

#### 1.4.8 hpmcounter CSR

The “hpmcounter” CSRs are implemented in this variant. Set parameter “hpmcounter\_undefined” to True to instead specify that “hpmcounter” CSRs are unimplemented and accesses should cause Illegal Instruction traps.

#### 1.4.9 time CSR

The “time” CSR is not implemented in this variant and reads of it will cause Illegal Instruction traps. Set parameter “time\_undefined” to False to instead specify that “time” is implemented.

#### 1.4.10 mcycle CSR

The “mcycle” CSR is implemented in this variant. Set parameter “mcycle\_undefined” to True to instead specify that “mcycle” is unimplemented and accesses should cause Illegal Instruction traps.

#### 1.4.11 minstret CSR

The “minstret” CSR is implemented in this variant. Set parameter “minstret\_undefined” to True to instead specify that “minstret” is unimplemented and accesses should cause Illegal Instruction traps.

#### 1.4.12 mhpmcounter CSR

The “mhpmcounter” CSRs are implemented in this variant. Set parameter “mhpmcounter\_undefined” to True to instead specify that “mhpmcounter” CSRs are unimplemented and accesses should cause Illegal Instruction traps.

#### 1.4.13 Unaligned Accesses

Unaligned memory accesses are not supported by this variant. Set parameter “unaligned” to “T” to enable such accesses.

Unaligned memory accesses are not supported for AMO instructions by this variant. Set parameter “unalignedAMO” to “T” to enable such accesses.

Address misaligned exceptions are higher priority than page fault or access fault exceptions on this variant. Set parameter “unaligned\_low\_pri” to “T” to specify that they are lower priority instead.

#### 1.4.14 PMP

8 PMP entries are implemented by this variant. Use parameter “PMP\_registers” to specify a different number of PMP entries; set the parameter to 0 to disable the PMP unit. The PMP grain size (G) is 0, meaning that PMP regions as small as 4 bytes are implemented. Use parameter “PMP\_grain” to specify a different grain size if required. Unaligned PMP accesses are not decomposed into separate aligned accesses; use parameter “PMP\_decompose” to modify this behavior if required. Parameters to change the write masks for the PMP CSRs are not enabled; use parameter “PMP\_maskparams” to modify this behavior if required. Parameters to change the reset values for the PMP CSRs are not enabled; use parameter “PMP\_initialparams” to modify this behavior if required

Accesses to unimplemented PMP registers are write-ignored and read as zero on this variant. Set parameter “PMP\_undefined” to True to indicate that such accesses should cause Illegal Instruction exceptions instead.

#### 1.4.15 LR/SC Granule

LR/SC instructions are implemented with a 64-byte reservation granule. A different granule size may be specified using parameter “lr\_sc\_grain”.

## 1.5 Compressed Extension

Standard compressed instructions are present in this variant. Legacy compressed extension features may also be configured using parameters described below. Use parameter “`commcompress_version`” to enable more recent compressed extension features if required.

Parameter `Zcea_version` is used to specify the version of Zcea instructions present. By default, `Zcea_version` is set to “none” in this variant. Updates to this parameter require a commercial product license.

Parameter `Zceb_version` is used to specify the version of Zceb instructions present. By default, `Zceb_version` is set to “none” in this variant. Updates to this parameter require a commercial product license.

Parameter `Zcee_version` is used to specify the version of Zcee instructions present. By default, `Zcee_version` is set to “none” in this variant. Updates to this parameter require a commercial product license.

## 1.6 Floating Point Features

Half precision floating point is not implemented. Use parameter “`Zfh`” to enable this if required.

By default, the processor starts with floating-point instructions disabled (`mstatus.FS=0`). Use parameter “`mstatus_FS`” to force `mstatus.FS` to a non-zero value for floating-point to be enabled from the start.

The specification is imprecise regarding the conditions under which `mstatus.FS` is set to Dirty state (3). Parameter “`mstatus_fs_mode`” can be used to specify the required behavior in this model, as described below.

If “`mstatus_fs_mode`” is set to “`always_dirty`” then the model implements a simplified floating point status view in which `mstatus.FS` holds values 0 (Off) and 3 (Dirty) only; any write of values 1 (Initial) or 2 (Clean) from privileged code behave as if value 3 was written.

If “`mstatus_fs_mode`” is set to “`write_1`” then `mstatus.FS` will be set to 3 (Dirty) by any explicit write to the `fflags`, `frm` or `fcsr` control registers, or by any executed instruction that writes an FPR, or by any executed floating point compare or conversion to integer/unsigned that signals a floating point exception. Floating point compare or conversion to integer/unsigned instructions that do not signal an exception will not set `mstatus.FS`.

If “`mstatus_fs_mode`” is set to “`write_any`” then `mstatus.FS` will be set to 3 (Dirty) by any explicit write to the `fflags`, `frm` or `fcsr` control registers, or by any executed instruction that writes an FPR, or by any executed floating point compare or conversion even if those instructions do not signal a floating point exception.

In this variant, “`mstatus_fs_mode`” is set to “`always_dirty`”.

## 1.7 Privileged Architecture

This variant implements the Privileged Architecture with version specified in the References section of this document. Note that parameter “priv\_version” can be used to select the required architecture version; see the following sections for detailed information about differences between each supported version.

### 1.7.1 Legacy Version 1.10

1.10 version of May 7 2017.

### 1.7.2 Version 20190608

Stable 1.11 version of June 8 2019, with these changes compared to version 1.10:

- mcountinhibit CSR defined;
- pages are never executable in Supervisor mode if page table entry U bit is 1;
- mstatus.TW is writable if any lower-level privilege mode is implemented (previously, it was just if Supervisor mode was implemented);

### 1.7.3 Version 20211203

1.12 draft version of December 3 2021, with these changes compared to version 20190608:

- mstatush, mseccfg, mseccfgh, menvcfg, menvcfgh, senvcfg, henvcfg, henvcfgh and mconfigptr CSRs defined;
- xret instructions clear mstatus.MPRV when leaving Machine mode if new mode is less privileged than M-mode;
- maximum number of PMP registers increased to 64;
- data endian is now configurable.

### 1.7.4 Version 1.12

Official 1.12 version, identical to 20211203.

### 1.7.5 Version master

Unstable master version, currently identical to 1.12.

## 1.8 Unprivileged Architecture

This variant implements the Unprivileged Architecture with version specified in the References section of this document. Note that parameter “user\_version” can be used to select the required architecture version; see the following sections for detailed information about differences between each supported version.

### 1.8.1 Legacy Version 2.2

2.2 version of May 7 2017.

### 1.8.2 Version 20191213

Stable 20191213-Base-Ratified version of December 13 2019, with these changes compared to version 2.2:

- floating point fmin/fmax instruction behavior modified to comply with IEEE 754-201x.
- numerous other optional behaviors can be separately enabled using Z-prefixed parameters.

## 1.9 Other Extensions

Other extensions that can be configured are described in this section.

### 1.9.1 Zmmul

Parameter “Zmmul” is 0 on this variant, meaning that all multiply and divide instructions are implemented. if “Zmmul” is set to 1 then multiply instructions are implemented but divide and remainder instructions are not implemented.

### 1.9.2 Zicsr

Parameter “Zicsr” is 1 on this variant, meaning that standard CSRs and CSR access instructions are implemented. if “Zicsr” is set to 0 then standard CSRs and CSR access instructions are not implemented and an alternative scheme must be provided as a processor extension.

### 1.9.3 Zifencei

Parameter “Zifencei” is 1 on this variant, meaning that the fence.i instruction is implemented (but treated as a NOP by the model). if “Zifencei” is set to 0 then the fence.i instruction is not implemented.

### 1.9.4 Zicbom

Parameter “Zicbom” is 0 on this variant, meaning that code block management instructions are undefined. if “Zicbom” is set to 1 then code block management instructions `cbo.clean`, `cbo.flush` and `cbo.invalid` are defined.

If Zicbom is present, the cache block size is given by parameter “`cmomp_bytes`”. The instructions may cause traps if used illegally but otherwise are NOPs in this model.

### 1.9.5 Zicbop

Parameter “Zicbop” is 0 on this variant, meaning that prefetch instructions are undefined. if “Zicbop” is set to 1 then prefetch instructions `prefetch.i`, `prefetch.r` and `prefetch.w` are defined (but behave as NOPs in this model).

### 1.9.6 Zicboz

Parameter “Zicboz” is 0 on this variant, meaning that the `cbo.zero` instruction is undefined. if “Zicboz” is set to 1 then the `cbo.zero` instruction is defined.

If Zicboz is present, the cache block size is given by parameter “`cmoz_bytes`”.

### 1.9.7 Smstateen

Parameter “Smstateen” is 0 on this variant, meaning that state enable CSRs are undefined. if “Smstateen” is set to 1 then state enable CSRs are defined.

Within the state enable CSRs, only bit 1 (for Zfinx), bit 57 (for xcontext CSR access), bit 62 (for xenvcfg CSR access) and bit 63 (for lower-level state enable CSR access) are currently implemented.

## 1.10 Load-Reserved/Store-Conditional Locking

By default, LR/SC locking is implemented automatically by the model and simulator, with a reservation granule defined by the “`lr_sc_grain`” parameter. It is also possible to implement locking externally to the model in a platform component, using the “`LR_address`”, “`SC_address`” and “`SC_valid`” net ports, as described below.

The “`LR_address`” output net port is written by the model with the address used by a load-reserved instruction as it executes. This port should be connected as an input to the external lock management component, which should record the address, and also that an LR/SC transaction is active.

The “`SC_address`” output net port is written by the model with the address used by a store-conditional instruction as it executes. This should be connected as an input to the external lock management component, which should compare the address with the previously-recorded load-reserved address, and determine from this (and other implementation-specific constraints) whether the store should succeed. It should then immediately write the Boolean success/fail code to the

“SC\_valid” input net port of the model. Finally, it should update state to indicate that an LR/SC transaction is no longer active.

It is also possible to write zero to the “SC\_valid” input net port at any time outside the context of a store-conditional instruction, which will mark any active LR/SC transaction as invalid.

Irrespective of whether LR/SC locking is implemented internally or externally, taking any exception or interrupt or executing exception-return instructions (e.g. MRET) will always mark any active LR/SC transaction as invalid.

Parameter “amo\_aborts\_lr\_sc” is used to specify whether AMO operations abort any active LR/SC pair. In this variant, “amo\_aborts\_lr\_sc” is 0.

## 1.11 Active Atomic Operation Indication

The “AMO\_active” output net port is written by the model with a code indicating any current atomic memory operation while the instruction is active. The written codes are:

- 0: no atomic instruction active
- 1: AMOMIN active
- 2: AMOMAX active
- 3: AMOMINU active
- 4: AMOMAXU active
- 5: AMOADD active
- 6: AMOXOR active
- 7: AMOOR active
- 8: AMOAND active
- 9: AMOSWAP active
- 10: LR active
- 11: SC active

## 1.12 Interrupts

The “reset” port is an active-high reset input. The processor is halted when “reset” goes high and resumes execution from the reset address specified using the “reset\_address” parameter or “reset\_addr” port when the signal goes low. The “mcause” register is cleared to zero.

The “nmi” port is an active-high NMI input. The processor resumes execution from the address specified using the “nmi\_address” parameter or “nmi\_addr” port when the NMI signal goes high. The “mcause” register is cleared to zero.

All other interrupt ports are active high. For each implemented privileged execution level, there are

by default input ports for software interrupt, timer interrupt and external interrupt; for example, for Machine mode, these are called “MSWInterrupt”, “MTimerInterrupt” and “MExternalInterrupt”, respectively. When the N extension is implemented, ports are also present for User mode. Parameter “unimp\_int\_mask” allows the default behavior to be changed to exclude certain interrupt ports. The parameter value is a mask in the same format as the “mip” CSR; any interrupt corresponding to a non-zero bit in this mask will be removed from the processor and read as zero in “mip”, “mie” and “mideleg” CSRs (and Supervisor and User mode equivalents if implemented).

Parameter “external\_int\_id” can be used to enable extra interrupt ID input ports on each hart. If the parameter is True then when an external interrupt is applied the value on the ID port is sampled and used to fill the Exception Code field in the “mcause” CSR (or the equivalent CSR for other execution levels). For Machine mode, the extra interrupt ID port is called “MExternalInterruptID”.

The “deferint” port is an active-high artifact input that, when written to 1, prevents any pending-and-enabled interrupt being taken (normally, such an interrupt would be taken on the next instruction after it becomes pending-and-enabled). The purpose of this signal is to enable alignment with hardware models in step-and-compare usage.

## 1.13 Debug Mode

The model can be configured to implement Debug mode using parameter “debug\_mode”. This implements features described in Chapter 4 of the RISC-V External Debug Support specification with version specified by parameter “debug\_version” (see References). Some aspects of this mode are not defined in the specification because they are implementation-specific; the model provides infrastructure to allow implementation of a Debug Module using a custom harness. Features added are described below.

Parameter “debug\_mode” can be used to specify three different behaviors, as follows:

1. If set to value “vector”, then operations that would cause entry to Debug mode result in the processor jumping to the address specified by the “debug\_address” parameter. It will execute at this address, in Debug mode, until a “dret” instruction causes return to non-Debug mode. Any exception generated during this execution will cause a jump to the address specified by the “dexc\_address” parameter.
2. If set to value “interrupt”, then operations that would cause entry to Debug mode result in the processor simulation call (e.g. `opProcessorSimulate`) returning, with a stop reason of `OP_SR_INTERRUPT`. In this usage scenario, the Debug Module is implemented in the simulation harness.
3. If set to value “halt”, then operations that would cause entry to Debug mode result in the processor halting. Depending on the simulation environment, this might cause a return from the simulation call with a stop reason of `OP_SR_HALT`, or debug mode might be implemented by another platform component which then restarts the debugged processor again.



### 1.13.1 Debug State Entry

The specification does not define how Debug mode is implemented. In this model, Debug mode is enabled by a Boolean pseudo-register, “DM”. When “DM” is True, the processor is in Debug mode. When “DM” is False, mode is defined by “mstatus” in the usual way.

Entry to Debug mode can be performed in any of these ways:

1. By writing True to register “DM” (e.g. using `opProcessorRegWrite`) followed by simulation of at least one cycle (e.g. using `opProcessorSimulate`), `dcsr.cause` will be reported as trigger;
2. By writing a 1 then 0 to net “haltreq” (using `opNetWrite`) followed by simulation of at least one cycle (e.g. using `opProcessorSimulate`);
3. By writing a 1 to net “resethaltreq” (using `opNetWrite`) while the “reset” signal undergoes a negedge transition, followed by simulation of at least one cycle (e.g. using `opProcessorSimulate`);
4. By executing an “ebreak” instruction when Debug mode entry for the current processor mode is enabled by `dcsr.ebreakm`, `dcsr.ebreaks` or `dcsr.ebreaku`.

In all cases, the processor will save required state in “dpc” and “dcsr” and then perform actions described above, depending in the value of the “debug\_mode” parameter.

### 1.13.2 Debug State Exit

Exit from Debug mode can be performed in any of these ways:

1. By writing False to register “DM” (e.g. using `opProcessorRegWrite`) followed by simulation of at least one cycle (e.g. using `opProcessorSimulate`);
2. By executing an “dret” instruction when Debug mode.

In both cases, the processor will perform the steps described in section 4.6 (Resume) of the Debug specification.

### 1.13.3 Debug Registers

When Debug mode is enabled, registers “dcsr”, “dpc”, “dscratch0” and “dscratch1” are implemented as described in the specification. These may be manipulated externally by a Debug Module using `opProcessorRegRead` or `opProcessorRegWrite`; for example, the Debug Module could write “dcsr” to enable “ebreak” instruction behavior as described above, or read and write “dpc” to emulate stepping over an “ebreak” instruction prior to resumption from Debug mode.

### 1.13.4 Debug Mode Execution

The specification allows execution of code fragments in Debug mode. A Debug Module implementation can cause execution in Debug mode by the following steps:

1. Write the address of a Program Buffer to the program counter using `opProcessorPCSet`;
2. If “debug\_mode” is set to “halt”, write 0 to pseudo-register “DMStall” (to leave halted state);

3. If entry to Debug mode was handled by exiting the simulation callback, call `opProcessorSimulate` or `opRootModuleSimulate` to resume simulation.

Debug mode will be re-entered in these cases:

1. By execution of an “ebreak” instruction; or:
2. By execution of an instruction that causes an exception.

In both cases, the processor will either jump to the debug exception address, or return control immediately to the harness, with `stopReason` of `OP_SR_INTERRUPT`, or perform a halt, depending on the value of the “debug\_mode” parameter.

### 1.13.5 Debug Single Step

When in Debug mode, the processor or harness can cause a single instruction to be executed on return from that mode by setting `dcsr.step`. After one non-Debug-mode instruction has been executed, control will be returned to the harness. The processor will remain in single-step mode until `dcsr.step` is cleared.

### 1.13.6 Debug Event Priorities

The model supports two different models for determining which debug exception occurs when multiple debug events are pending:

- 1: original mode (when parameter “debug\_priority”=“original”);
- 2: modified mode, as described in Debug Specification pull request 693 (when parameter “debug\_priority”=“PR693”). This mode resolves some anomalous behavior of the original specification.

### 1.13.7 Debug Ports

Port “DM” is an output signal that indicates whether the processor is in Debug mode

Port “haltreq” is a rising-edge-triggered signal that triggers entry to Debug mode (see above).

Port “resethaltreq” is a level-sensitive signal that triggers entry to Debug mode after reset (see above).

## 1.14 Debug Mask

It is possible to enable model debug messages in various categories. This can be done statically using the “debugflags” parameter, or dynamically using the “debugflags” command. Enabled messages are specified using a bitmask value, as follows:

Value 0x002: enable debugging of PMP and virtual memory state;

Value 0x004: enable debugging of interrupt state.

All other bits in the debug bitmask are reserved and must not be set to non-zero values.

## 1.15 Integration Support

This model implements a number of non-architectural pseudo-registers and other features to facilitate integration.

### 1.15.1 CSR Register External Implementation

If parameter “enable\_CSR\_bus” is True, an artifact 16-bit bus “CSR” is enabled. Slave callbacks installed on this bus can be used to implement modified CSR behavior (use `opBusSlaveNew` or `icmMapExternalMemory`, depending on the client API). A CSR with index `0xABC` is mapped on the bus at address `0xABC0`; as a concrete example, implementing CSR “time” (number `0xC01`) externally requires installation of callbacks at address `0xC010` on the CSR bus.

### 1.15.2 LR/SC Active Address

Artifact register “LRSCAddress” shows the active LR/SC lock address. The register holds all-ones if there is no LR/SC operation active or if LR/SC locking is implemented externally as described above.

### 1.15.3 Artifact Register “fflags\_i”

If parameter “enable\_fflags\_i” is True, an 8-bit artifact register “fflags\_i” is added to the model. This register shows the floating point flags set by the current instruction (unlike the standard “fflags” CSR, in which the flag bits are sticky).

## 1.16 Limitations

Instruction pipelines are not modeled in any way. All instructions are assumed to complete immediately. This means that instruction barrier instructions (e.g. `fence.i`) are treated as NOPs, with the exception of any Illegal Instruction behavior, which is modeled.

Caches and write buffers are not modeled in any way. All loads, fetches and stores complete immediately and in order, and are fully synchronous. Data barrier instructions (e.g. `fence`) are treated as NOPs, with the exception of any Illegal Instruction behavior, which is modeled.

Real-world timing effects are not modeled: all instructions are assumed to complete in a single cycle.

Hardware Performance Monitor registers are not implemented and hardwired to zero.

## 1.17 Verification

All instructions have been extensively tested by Imperas, using tests generated specifically for this model and also reference tests from <https://github.com/riscv/riscv-tests>.

Also reference tests have been used from various sources including:

<https://github.com/riscv/riscv-tests>

<https://github.com/ucb-bar/riscv-torture>

The Imperas OVPsim RISC-V models are used in the RISC-V Foundation Compliance Framework as a functional Golden Reference:

<https://github.com/riscv/riscv-compliance>

where the simulated model is used to provide the reference signatures for compliance testing. The Imperas OVPsim RISC-V models are used as reference in both open source and commercial instruction stream test generators for hardware design verification, for example:

<http://valtrix.in/sting> from Valtrix

<https://github.com/google/riscv-dv> from Google

The Imperas OVPsim RISC-V models are also used by commercial and open source RISC-V Core RTL developers as a reference to ensure correct functionality of their IP.

## 1.18 References

The Model details are based upon the following specifications:

RISC-V Instruction Set Manual, Volume I: User-Level ISA (User Architecture Version 20191213)

RISC-V Instruction Set Manual, Volume II: Privileged Architecture (Privileged Architecture Version Ratified-IMFDQC-and-Priv-v1.11)

SiFive E76 Manual v19.05

## Chapter 2

# SiFive-Specific Extensions

SiFive processors can add various custom extensions to the basic RISC-V architecture. This model implements the following:

### 2.1 SiFive-Specific CSRs

This section describes SiFive-specific CSRs implemented by this variant. Refer to SiFive reference documentation for more information.

#### 2.1.1 featureDisable (csr num 0x7c1)

Reading and writing the SiFive custom M-Mode Feature Disable CSR is supported. Since this register controls only micro-architectural behavior, which is not modeled, the setting of this register has no effect, and all fields are hardwired to 0.

### 2.2 SiFive-Specific Instructions

This section describes SiFive-specific instructions implemented by this variant. Refer to SiFive reference documentation for more information.

#### 2.2.1 CFLUSH.D.L1

31	20	19	15	14	12	11	7	6	0
111111000000		Rs1		000		00000		1110011	(System)

Instruction to flush the DCACHE L1 line for the address in Rs1. This instruction will generate exceptions for attempts to flush addresses that are not writable, but since caches are not modeled will otherwise have no effect.

### 2.2.2 CDISCARD.D.L1

31	20	19	15	14	12	11	7	6	0
111111000010		Rs1		000		00000		1110011 (System)	

Instruction to discard the DCACHE L1 line for the address in Rs1. This instruction will generate exceptions for attempts to flush addresses that are not writable, but since caches are not modeled will otherwise have no effect.

# Chapter 3

## Configuration

### 3.1 Location

This model's VLVN is `sifive.ovpworld.org/processor/riscv/1.0`.

The model source is usually at:

`$IMPERAS_HOME/ImperasLib/source/sifive.ovpworld.org/processor/riscv/1.0`

The model binary is usually at:

`$IMPERAS_HOME/lib/$IMPERAS_ARCH/ImperasLib/sifive.ovpworld.org/processor/riscv/1.0`

### 3.2 GDB Path

The default GDB for this model is: `$IMPERAS_HOME/lib/$IMPERAS_ARCH/gdb/riscv-none-embed-gdb`.

### 3.3 Semi-Host Library

The default semi-host library file is `riscv.ovpworld.org/semihosting/pk/1.0`

### 3.4 Processor Endian-ness

This is a LITTLE endian model.

### 3.5 QuantumLeap Support

This processor is qualified to run in a QuantumLeap enabled simulator.

### 3.6 Processor ELF code

The ELF code supported by this model is: `0xf3`.

## Chapter 4

# All Variants in this model

This model has these variants

<b>Variant</b>	Description
E20	
E21	
E24	
E31	
E34	
E51	
E76	(described in this document)
S21	
S51	
S54	
S76	
U54	
U74	
X280	
P550	
P650	
P270	
E61	
S61	
U64	

Table 4.1: All Variants in this model



## Chapter 5

# Bus Master Ports

This model has these bus master ports.

<b>Name</b>	min	max	Connect?	Description
INSTRUCTION	32	34	mandatory	Instruction bus
DATA	32	34	optional	Data bus

Table 5.1: Bus Master Ports

## Chapter 6

# Bus Slave Ports

This model has no bus slave ports.

# Chapter 7

## Net Ports

This model has these net ports.

Name	Type	Connect?	Description
hart0_reset	input	optional	Reset
hart0_reset_addr	input	optional	externally-applied reset address
hart0_nmi	input	optional	NMI
hart0_nmi_cause	input	optional	externally-applied NMI cause
hart0_nmi_addr	input	optional	externally-applied NMI address
hart0_nmieuxc_addr	input	optional	externally-applied RNMI exception address
hart0_MSWInterrupt	input	optional	Machine software interrupt
hart0_MTimerInterrupt	input	optional	Machine timer interrupt
hart0_MExternalInterrupt	input	optional	Machine external interrupt
hart0_LocalInterrupt0	input	optional	Local interrupt 0
hart0_LocalInterrupt1	input	optional	Local interrupt 1
hart0_LocalInterrupt2	input	optional	Local interrupt 2
hart0_LocalInterrupt3	input	optional	Local interrupt 3
hart0_LocalInterrupt4	input	optional	Local interrupt 4
hart0_LocalInterrupt5	input	optional	Local interrupt 5
hart0_LocalInterrupt6	input	optional	Local interrupt 6
hart0_LocalInterrupt7	input	optional	Local interrupt 7
hart0_LocalInterrupt8	input	optional	Local interrupt 8
hart0_LocalInterrupt9	input	optional	Local interrupt 9
hart0_LocalInterrupt10	input	optional	Local interrupt 10
hart0_LocalInterrupt11	input	optional	Local interrupt 11
hart0_LocalInterrupt12	input	optional	Local interrupt 12
hart0_LocalInterrupt13	input	optional	Local interrupt 13
hart0_LocalInterrupt14	input	optional	Local interrupt 14
hart0_LocalInterrupt15	input	optional	Local interrupt 15
hart0_irq_ack_o	output	optional	interrupt acknowledge (pulse)
hart0_irq_id_o	output	optional	acknowledged interrupt id (valid during irq_ack_o pulse)
hart0_sec_lvl_o	output	optional	current privilege level

hart0_LR_address	output	optional	Port written with effective address for LR instruction
hart0_SC_address	output	optional	Port written with effective address for SC instruction
hart0_SC_valid	input	optional	SC_address valid input signal
hart0_AMO_active	output	optional	Port written with code indicating active AMO
hart0_deferint	input	optional	Artifact signal causing interrupts to be held off when high

Table 7.1: Net Ports

## Chapter 8

# FIFO Ports

This model has no FIFO ports.

# Chapter 9

## Formal Parameters

Name	Type	Description
<b>Fundamental</b>		
variant	Enumeration	Selects variant (either a generic UISA or a specific model)
user_version	Enumeration	Specify required User Architecture version (2.2, 2.3, 20190305 or 20191213)
priv_version	Enumeration	Specify required Privileged Architecture version (1.10, 1.11, 20190405, 20190608, 20211203, 1.12 or master)
numHarts	Uns32	Specify the number of hart contexts in a multiprocessor
endian	Endian	Model endian
enable_expanded	Boolean	Specify that 48-bit and 64-bit expanded instructions are supported
endianFixed	Boolean	Specify that data endianness is fixed (mstatus.{MBE,SBE,UBE} fields are read-only)
misa_MXL	Uns32	Override default value of misa.MXL
misa_Extensions	Uns32	Override default value of misa.Extensions
add_Extensions	String	Add extensions specified by letters to misa.Extensions (for example, specify “VD” to add V and D features)
sub_Extensions	String	Remove extensions specified by letters from misa.Extensions (for example, specify “VD” to remove V and D features)
misa_Extensions_mask	Uns32	Override mask of writable bits in misa.Extensions
add_Extensions_mask	String	Add extensions specified by letters to mask of writable bits in misa.Extensions (for example, specify “VD” to add V and D features)
sub_Extensions_mask	String	Remove extensions specified by letters from mask of writable bits in misa.Extensions (for example, specify “VD” to remove V and D features)
add_implicit_Extensions	String	Add extensions specified by letters to implicitly-present extensions not visible in misa.Extensions
sub_implicit_Extensions	String	Remove extensions specified by letters from implicitly-present extensions not visible in misa.Extensions
<b>Compressed_Extension</b>		
compress_version	Enumeration	Specify required Compressed Architecture version (legacy, 0.70.1 or 0.70.5)
Zcea_version	Enumeration	Specify version of Zcea implemented (legacy only) (none or 0.50.1)
Zceb_version	Enumeration	Specify version of Zceb implemented (legacy only) (none or 0.50.1)
Zcee_version	Enumeration	Specify version of Zcee implemented (legacy only) (none or 1.0.0-rc)
<b>Interrupts_Exceptions</b>		
rnmi_version	Enumeration	Specify required RNMI Architecture version (none or 0.2.1)
mtvec_is_ro	Boolean	Specify whether mtvec CSR is read-only
tvec_align	Uns32	Specify hardware-enforced alignment of mtvec/stvec/utvec when Vectored interrupt mode enabled
ecode_mask	Uns64	Specify hardware-enforced mask of writable bits in xcause.ExceptionCode
ecode_nmi	Uns64	Specify xcause.ExceptionCode for NMI

ecode.nmi_mask	Uns64	Specify hardware-enforced mask of writable bits in mn-cause.ExceptionCode
nmi_is_latched	Boolean	Specify whether NMI input is latched on rising edge (if False, it is level-sensitive)
tval_zero	Boolean	Specify whether mtval/stval/utval are hard wired to zero
tval_zero_ebreak	Boolean	Specify whether mtval/stval/utval are set to zero by an ebreak
tval_ii_code	Boolean	Specify whether mtval/stval contain faulting instruction bits on illegal instruction exception
trap_preserves_lr	Boolean	Whether a trap preserves active LR/SC state
xret_preserves_lr	Boolean	Whether an xret instruction preserves active LR/SC state
reset_address	Uns64	Override reset vector address
nmi_address	Uns64	Override NMI vector address
nmiexc_address	Uns64	Override RNMI exception vector address
CLINT_address	Uns64	Specify base address of internal CLINT model (or 0 for no CLINT)
local_int_num	Uns32	Specify number of supplemental local interrupts
unimp_int_mask	Uns64	Specify mask of unimplemented interrupts (e.g. 1<<9 indicates Supervisor external interrupt unimplemented)
force_mideleg	Uns64	Specify mask of interrupts always delegated to lower-priority execution level from Machine execution level
no_ideleg	Uns64	Specify mask of interrupts that cannot be delegated to lower-priority execution levels
no_edeleg	Uns64	Specify mask of exceptions that cannot be delegated to lower-priority execution levels
external_int_id	Boolean	Whether to add nets allowing External Interrupt ID codes to be forced
<b>Floating Point</b>		
mstatus_fs_mode	Enumeration	Specify conditions causing update of mstatus.FS to dirty (write_1, write_any, always_dirty or force_dirty)
d_requires_f	Boolean	If D and F extensions are separately enabled in the misa CSR, whether D is enabled only if F is enabled
enable_fflags_i	Boolean	Whether fflags.i artifact register present (shows per-instruction floating point flags)
mstatus_FS	Uns32	Override default value of mstatus.FS (initial state of floating point unit)
Zfh	Boolean	Specify that Zfh is implemented (IEEE half-precision floating point is supported)
Zfhmin	Boolean	Specify that Zfhmin is implemented (restricted IEEE half-precision floating point is supported)
Zfinx_version	Enumeration	Specify version of Zfinx implemented (use integer register file for floating point instructions) (none, 0.4 or 0.41)
<b>Debug Extension</b>		
debug_mode	Enumeration	Specify how Debug mode is implemented (none, vector, interrupt or halt)
lr_sc_constraint	Enumeration	Specify memory constraint for LR/SC instructions (none, user1 or user2)
amo_constraint	Enumeration	Specify memory constraint for AMO instructions (none, user1 or user2)
<b>Simulation Artifact</b>		
use_hw_reg_names	Boolean	Specify whether to use hardware register names x0-x31 and f0-f31 instead of ABI register names
no_pseudo_inst	Boolean	Specify whether pseudo-instructions should not be reported in trace and disassembly
verbose	Boolean	Specify verbose output messages
traceVolatile	Boolean	Specify whether volatile registers (e.g. minstret) should be shown in change trace
enable_CSR_bus	Boolean	Add artifact CSR bus port, allowing CSR registers to be externally implemented
CSR_remap	String	Comma-separated list of CSR number mappings, each of the form <csr-Name>=<number>
<b>Memory</b>		

unaligned_low_pri	Boolean	Specify whether address misaligned exceptions are lower priority than page or access fault exceptions
unaligned	Boolean	Specify whether the processor supports unaligned memory accesses
unalignedAMO	Boolean	Specify whether the processor supports unaligned memory accesses for AMO instructions
amo_aborts_lr_sc	Boolean	Specify whether AMO operations abort any active LR/SC pair
lr_sc_grain	Uns32	Specify byte granularity of ll/sc lock region (constrained to a power of two)
<b>Instruction_CSR_Behavior</b>		
wfi_is_nop	Boolean	Specify whether WFI should be treated as a NOP (if not, halt while waiting for interrupts)
counteren_mask	Uns32	Specify hardware-enforced mask of writable bits in mcounteren/scounteren registers
noinhibit_mask	Uns32	Specify hardware-enforced mask of always-zero bits in mcountinhibit register
cycle_undefined	Boolean	Specify that the cycle CSR is undefined
mcycle_undefined	Boolean	Specify that the mcycle CSR is undefined
time_undefined	Boolean	Specify that the time CSR is undefined
instret_undefined	Boolean	Specify that the instret CSR is undefined
minstret_undefined	Boolean	Specify that the minstret CSR is undefined
hpmcounter_undefined	Boolean	Specify that the hpmcounter CSRs are undefined
mhpmcounter_undefined	Boolean	Specify that the mhpmcounter CSRs are undefined
<b>CSR_Masks</b>		
mtvec_mask	Uns64	Specify hardware-enforced mask of writable bits in mtvec register
mip_mask	Uns64	Specify hardware-enforced mask of writable bits in mip register
mtvec_sext	Boolean	Specify whether mtvec is sign-extended from most-significant bit
<b>Trigger</b>		
trigger_num	Uns32	Specify the number of implemented hardware triggers
<b>PMP Configuration</b>		
PMP_grain	Uns32	Specify PMP region granularity, G (0 =>4 bytes, 1 =>8 bytes, etc)
PMP_registers	Uns32	Specify the number of implemented PMP address registers
PMP_max_page	Uns32	Specify the maximum size of PMP region to map if non-zero (may improve performance; constrained to a power of two)
PMP_decompose	Boolean	Whether unaligned PMP accesses are decomposed into separate aligned accesses
PMP_undefined	Boolean	Whether accesses to unimplemented PMP registers are undefined (if True) or write ignored and zero (if False)
PMP_maskparams	Boolean	Enable parameters to change the read-only masks for PMP CSRs
PMP_initialparams	Boolean	Enable parameters to change the reset values for PMP CSRs
<b>Other Extensions</b>		
Smstateen	Boolean	Specify that Smstateen is implemented
Zicsr	Boolean	Specify that Zicsr is implemented
Zifencei	Boolean	Specify that Zifencei is implemented
Zicbom	Boolean	Specify that Zicbom is implemented
Zicbop	Boolean	Specify that Zicbop is implemented
Zicboz	Boolean	Specify that Zicboz is implemented
Zmmul	Boolean	Specify that Zmmul is implemented
<b>CSR Defaults</b>		
mvendorid	Uns64	Override mvendorid register
marchid	Uns64	Override marchid register
mimpid	Uns64	Override mimpid register
mhartid	Uns64	Override mhartid register (or first mhartid of an incrementing sequence if this is an SMP variant)
mtvec	Uns64	Override mtvec register
<b>Fast Interrupt</b>		



CLICLEVELS	Uns32	Specify number of interrupt levels implemented by CLIC, or 0 if CLIC absent
------------	-------	---

Table 9.1: Parameters that can be set in: SMP

## 9.1 Extension Parameters

Name	Type	Description
FeatureDisable_Present	Boolean	Specify whether Feature Disable CSR present
BranchPredictionMode_Present	Boolean	Specify whether Branch Prediction Mode CSR present
PowerDial_Present	Boolean	Specify whether PowerDial CSR present
CFLUSH_Present	Boolean	Specify whether CFLUSH.D.L1 and CDISCARD.D.L1 instructions present
CEASE_Present	Boolean	Specify whether CEASE instruction present
PAUSE_Present	Boolean	Specify whether PAUSE instruction present

Table 9.2: Parameters for sifiveExtensions

## 9.2 Parameters with enumerated types

### 9.2.1 Parameter user\_version

Set to this value	Description
2.2	User Architecture Version 2.2
2.3	Deprecated and equivalent to 20191213
20190305	Deprecated and equivalent to 20191213
20191213	User Architecture Version 20191213

Table 9.3: Values for Parameter user\_version

### 9.2.2 Parameter priv\_version

Set to this value	Description
1.10	Privileged Architecture Version 1.10
1.11	Privileged Architecture Version 1.11, equivalent to 20190608
20190405	Deprecated and equivalent to 20190608
20190608	Privileged Architecture Version Ratified-IMFDQC-and-Priv-v1.11
20211203	Privileged Architecture Version 20211203
1.12	Privileged Architecture Version 1.12, equivalent to 20211203
master	Privileged Architecture Master Branch as of commit 6bdeb58 (this is subject to change)

Table 9.4: Values for Parameter priv\_version

### 9.2.3 Parameter compress\_version

Set to this value	Description
legacy	Compressed Architecture absent or legacy version
0.70.1	Compressed Architecture Version 0.70.1
0.70.5	Compressed Architecture Version 0.70.5

Table 9.5: Values for Parameter compress\_version

### 9.2.4 Parameter `rnmi_version`

Set to this value	Description
none	RNMI not implemented
0.2.1	RNMI version 0.2.1

Table 9.6: Values for Parameter `rnmi_version`

### 9.2.5 Parameter `mstatus_fs_mode`

Set to this value	Description
<code>write_1</code>	Any non-zero flag result sets <code>mstatus.fs</code> dirty
<code>write_any</code>	Any write of flags sets <code>mstatus.fs</code> dirty
<code>always_dirty</code>	<code>mstatus.fs</code> is either off or dirty
<code>force_dirty</code>	<code>mstatus.fs</code> is forced to dirty

Table 9.7: Values for Parameter `mstatus_fs_mode`

### 9.2.6 Parameter `debug_mode`

Set to this value	Description
none	Debug mode not implemented
vector	Debug mode implemented by execution at vector
interrupt	Debug mode implemented by interrupt
halt	Debug mode implemented by halt

Table 9.8: Values for Parameter `debug_mode`

### 9.2.7 Parameter `lr_sc_constraint`

Set to this value	Description
none	Memory access not constrained
user1	Memory access constrained by <code>MEM_CONSTRAINT_USER1</code>
user2	Memory access constrained by <code>MEM_CONSTRAINT_USER2</code>

Table 9.9: Values for Parameter `lr_sc_constraint`

### 9.2.8 Parameter `amo_constraint`

Set to this value	Description
none	Memory access not constrained
user1	Memory access constrained by <code>MEM_CONSTRAINT_USER1</code>
user2	Memory access constrained by <code>MEM_CONSTRAINT_USER2</code>

Table 9.10: Values for Parameter `amo_constraint`

### 9.2.9 Parameter `Zfinx_version`

Set to this value	Description
none	Zfinx not implemented
0.4	Zfinx version 0.4
0.41	Zfinx version 0.41

Table 9.11: Values for Parameter Zfinx\_version

### 9.2.10 Parameter Zcea\_version

Set to this value	Description
none	Zcea not implemented
0.50.1	Zcea version 0.50.1

Table 9.12: Values for Parameter Zceb\_version

### 9.2.11 Parameter Zceb\_version

Set to this value	Description
none	Zceb not implemented
0.50.1	Zceb version 0.50.1

Table 9.13: Values for Parameter Zcee\_version

### 9.2.12 Parameter Zcee\_version

Set to this value	Description
none	Zcee not implemented
1.0.0-rc	Zcee version 1.0.0-rc

Table 9.14: Values for Parameter Zcee\_version

## 9.3 Parameter values

These are the current parameter values.

Name	Value
<b>Fundamental</b>	
variant	E76
user_version	20191213
priv_version	20190608
numHarts	1
endian	none
enable_expanded	F
endianFixed	F
misa_MXL	1
misa_Extensions	0x101125
add_Extensions	
sub_Extensions	
misa_Extensions_mask	0
add_Extensions_mask	
sub_Extensions_mask	
add_implicit_Extensions	

sub_implicit_Extensions	
<b>Compressed_Extension</b>	
compress_version	legacy
Zcea_version	none
Zceb_version	none
Zcee_version	none
<b>Interrupts_Exceptions</b>	
rnmi_version	0.2.1
mtvec_is_ro	F
tvec_align	64
ecode_mask	31
ecode_nmi	2
ecode_nmi_mask	3
nmi_is_latched	F
tval_zero	F
tval_zero_ebreak	F
tval_ii_code	T
trap_preserves_lr	F
xret_preserves_lr	F
reset_address	0
nmi_address	0
nmiexc_address	0
CLINT_address	0
local_int_num	16
unimp_int_mask	0
force_mideleg	0
no_ideleg	0
no_e deleg	0
external_int_id	F
<b>Floating_Point</b>	
mstatus_fs_mode	always_dirty
d_requires_f	T
enable_fflags_i	F
mstatus_FS	0
Zfh	F
Zfhmin	F
Zfinx_version	none
<b>Debug_Extension</b>	
debug_mode	none
lr_sc_constraint	user1
amo_constraint	user1
<b>Simulation_Artifact</b>	
use_hw_reg_names	F
no_pseudo_inst	F
verbose	F

traceVolatile	F
enable_CSR_bus	F
CSR_remap	
<b>Memory</b>	
unaligned_low_pri	F
unaligned	F
unalignedAMO	F
amo_aborts_lr_sc	F
lr_sc_grain	64
<b>Instruction_CSR_Behavior</b>	
wfi_is_nop	F
counteren_mask	0xffffffff
noinhibit_mask	0
cycle_undefined	F
mcycle_undefined	F
time_undefined	T
instret_undefined	F
minstret_undefined	F
hpmcounter_undefined	F
mhpmcounter_undefined	F
<b>CSR Masks</b>	
mtvec_mask	0
mip_mask	0x337
mtvec_sext	F
<b>Trigger</b>	
trigger_num	0
<b>PMP Configuration</b>	
PMP_grain	0
PMP_registers	8
PMP_max_page	0
PMP_decompose	F
PMP_undefined	F
PMP_maskparams	F
PMP_initialparams	F
<b>Other Extensions</b>	
Smstateen	F
Zicsr	T
Zifencei	T
Zicbom	F
Zicbop	F
Zicboz	F
Zmmul	F
<b>CSR Defaults</b>	
mvvendorid	0x489
marchid	0x80000007

mimpid	0x4210427
mhartid	0
mtvec	0
<b>Fast Interrupt</b>	
CLICLEVELS	0
<b>sifiveExtensions</b>	
FeatureDisable_Present*	T
BranchPredictionMode_Present*	F
PowerDial_Present*	F
CFLUSH_Present*	T
CEASE_Present*	F
PAUSE_Present*	F

Table 9.15: Parameter values

\* Parameters marked with an asterisk are part of the processor extension library.

## Chapter 10

# Execution Modes

<b>Mode</b>	Code	Description
User	0	User mode
Machine	3	Machine mode

Table 10.1: Modes implemented in: Hart

# Chapter 11

## Exceptions

Exception	Code	Description
InstructionAddressMisaligned	0	Fetch from unaligned address
InstructionAccessFault	1	No access permission for fetch
IllegalInstruction	2	Undecoded, unimplemented or disabled instruction
Breakpoint	3	EBREAK instruction executed
LoadAddressMisaligned	4	Load from unaligned address
LoadAccessFault	5	No access permission for load
StoreAMOAddressMisaligned	6	Store/atomic memory operation at unaligned address
StoreAMOAccessFault	7	No access permission for store/atomic memory operation
EnvironmentCallFromUMode	8	ECALL instruction executed in User mode
EnvironmentCallFromMMode	11	ECALL instruction executed in Machine mode
InstructionPageFault	12	Page fault at fetch address
LoadPageFault	13	Page fault at load address
StoreAMOPageFault	15	Page fault at store/atomic memory operation address
MSWInterrupt	67	Machine software interrupt
MTimerInterrupt	71	Machine timer interrupt
MExternalInterrupt	75	Machine external interrupt
LocalInterrupt0	80	Local interrupt 0
LocalInterrupt1	81	Local interrupt 1
LocalInterrupt2	82	Local interrupt 2
LocalInterrupt3	83	Local interrupt 3
LocalInterrupt4	84	Local interrupt 4
LocalInterrupt5	85	Local interrupt 5
LocalInterrupt6	86	Local interrupt 6
LocalInterrupt7	87	Local interrupt 7
LocalInterrupt8	88	Local interrupt 8
LocalInterrupt9	89	Local interrupt 9
LocalInterrupt10	90	Local interrupt 10
LocalInterrupt11	91	Local interrupt 11



LocalInterrupt12	92	Local interrupt 12
LocalInterrupt13	93	Local interrupt 13
LocalInterrupt14	94	Local interrupt 14
LocalInterrupt15	95	Local interrupt 15

Table 11.1: Exceptions implemented in: Hart

# Chapter 12

## Hierarchy of the model

A CPU core may be configured to instance many processors of a Symmetrical Multi Processor (SMP). A CPU core may also have sub elements within a processor, for example hardware threading blocks.

OVP processor models can be written to include SMP blocks and to have many levels of hierarchy. Some OVP CPU models may have a fixed hierarchy, and some may be configured by settings in a configuration register. Please see the register definitions of this model.

This model documentation shows the settings and hierarchy of the default settings for this model variant.

### 12.1 Level 1: SMP

This level in the model hierarchy has 2 commands.

This level in the model hierarchy has no register groups.

This level in the model hierarchy has one child:

hart0

### 12.2 Level 2: Hart

This level in the model hierarchy has 5 commands.

This level in the model hierarchy has 5 register groups:

Group name	Registers
Core	33
Floating_point	32
User_Control_and_Status	65
Machine_Control_and_Status	131
Integration_support	13

Table 12.1: Register groups

This level in the model hierarchy has no children.

# Chapter 13

## Model Commands

A Processor model can implement one or more **Model Commands** available to be invoked from the simulator command line, from the OP API or from the Imperas Multiprocessor Debugger.

### 13.1 Level 1: SMP

#### 13.1.1 isync

specify instruction address range for synchronous execution

Argument	Type	Description
-addresshi	Uns64	end address of synchronous execution range
-addresslo	Uns64	start address of synchronous execution range

Table 13.1: isync command arguments

#### 13.1.2 itrace

enable or disable instruction tracing

Argument	Type	Description
-after	Uns64	apply after this many instructions
-enable	Boolean	enable instruction tracing
-instructioncount	Boolean	include the instruction number in each trace
-memory	String	show memory accesses by this instruction. Argument can be any combination of X (execute), A (load or store access) and S (system)
-mode	Boolean	show processor mode changes
-off	Boolean	disable instruction tracing
-on	Boolean	enable instruction tracing
-processorname	Boolean	Include processor name in all trace lines
-registerchange	Boolean	show registers changed by this instruction
-registers	Boolean	show registers after each trace

Table 13.2: itrace command arguments

## 13.2 Level 2: Hart

### 13.2.1 debugflags

show or modify the processor debug flags

Argument	Type	Description
-get	Boolean	print current processor flags value
-mask	Boolean	print valid debug flag bits
-set	Int32	new processor flags (only flags 0x00000006 can be modified)

Table 13.3: debugflags command arguments

### 13.2.2 getCSRIndex

Return index for a named CSR (or -1 if no matching CSR)

Argument	Type	Description
-name	String	CSR name

Table 13.4: getCSRIndex command arguments

### 13.2.3 isync

specify instruction address range for synchronous execution

Argument	Type	Description
-addresshi	Uns64	end address of synchronous execution range
-addresslo	Uns64	start address of synchronous execution range

Table 13.5: isync command arguments

### 13.2.4 itrace

enable or disable instruction tracing

Argument	Type	Description
-after	Uns64	apply after this many instructions
-enable	Boolean	enable instruction tracing
-instructioncount	Boolean	include the instruction number in each trace
-memory	String	show memory accesses by this instruction. Argument can be any combination of X (execute), A (load or store access) and S (system)
-mode	Boolean	show processor mode changes
-off	Boolean	disable instruction tracing
-on	Boolean	enable instruction tracing
-processorname	Boolean	Include processor name in all trace lines
-registerchange	Boolean	show registers changed by this instruction
-registers	Boolean	show registers after each trace

---

Table 13.6: itrace command arguments

### 13.2.5 listCSRs

#### 13.2.5.1 Argument description

List all CSRs in index order

# Chapter 14

## Registers

### 14.1 Level 1: SMP

No registers.

### 14.2 Level 2: Hart

#### 14.2.1 Core

Registers at level:2, type:Hart group:Core

Name	Bits	Initial-Hex	RW	Description
zero	32	0	r-	
ra	32	0	rw	
sp	32	0	rw	stack pointer
gp	32	0	rw	
tp	32	0	rw	
t0	32	0	rw	
t1	32	0	rw	
t2	32	0	rw	
s0	32	0	rw	
s1	32	0	rw	
a0	32	0	rw	
a1	32	0	rw	
a2	32	0	rw	
a3	32	0	rw	
a4	32	0	rw	
a5	32	0	rw	
a6	32	0	rw	
a7	32	0	rw	
s2	32	0	rw	
s3	32	0	rw	
s4	32	0	rw	
s5	32	0	rw	
s6	32	0	rw	
s7	32	0	rw	
s8	32	0	rw	
s9	32	0	rw	
s10	32	0	rw	
s11	32	0	rw	

t3	32	0	rw	
t4	32	0	rw	
t5	32	0	rw	
t6	32	0	rw	
pc	32	0	rw	program counter

Table 14.1: Registers at level 2, type:Hart group:Core

### 14.2.2 Floating\_point

Registers at level:2, type:Hart group:Floating\_point

Name	Bits	Initial-Hex	RW	Description
ft0	32	0	rw	
ft1	32	0	rw	
ft2	32	0	rw	
ft3	32	0	rw	
ft4	32	0	rw	
ft5	32	0	rw	
ft6	32	0	rw	
ft7	32	0	rw	
fs0	32	0	rw	
fs1	32	0	rw	
fa0	32	0	rw	
fa1	32	0	rw	
fa2	32	0	rw	
fa3	32	0	rw	
fa4	32	0	rw	
fa5	32	0	rw	
fa6	32	0	rw	
fa7	32	0	rw	
fs2	32	0	rw	
fs3	32	0	rw	
fs4	32	0	rw	
fs5	32	0	rw	
fs6	32	0	rw	
fs7	32	0	rw	
fs8	32	0	rw	
fs9	32	0	rw	
fs10	32	0	rw	
fs11	32	0	rw	
ft8	32	0	rw	
ft9	32	0	rw	
ft10	32	0	rw	
ft11	32	0	rw	

Table 14.2: Registers at level 2, type:Hart group:Floating\_point

### 14.2.3 User\_Control\_and\_Status

Registers at level:2, type:Hart group:User\_Control\_and\_Status

Name	Bits	Initial-Hex	RW	Description
fflags	32	0	rw	Floating-Point Flags
frm	32	0	rw	Floating-Point Rounding Mode

fcsr	32	0	rw	Floating-Point Control and Status
cycle	32	0	r-	Cycle Counter
instret	32	0	r-	Instructions Retired
hpmcounter3	32	0	r-	Performance Monitor Counter 3
hpmcounter4	32	0	r-	Performance Monitor Counter 4
hpmcounter5	32	0	r-	Performance Monitor Counter 5
hpmcounter6	32	0	r-	Performance Monitor Counter 6
hpmcounter7	32	0	r-	Performance Monitor Counter 7
hpmcounter8	32	0	r-	Performance Monitor Counter 8
hpmcounter9	32	0	r-	Performance Monitor Counter 9
hpmcounter10	32	0	r-	Performance Monitor Counter 10
hpmcounter11	32	0	r-	Performance Monitor Counter 11
hpmcounter12	32	0	r-	Performance Monitor Counter 12
hpmcounter13	32	0	r-	Performance Monitor Counter 13
hpmcounter14	32	0	r-	Performance Monitor Counter 14
hpmcounter15	32	0	r-	Performance Monitor Counter 15
hpmcounter16	32	0	r-	Performance Monitor Counter 16
hpmcounter17	32	0	r-	Performance Monitor Counter 17
hpmcounter18	32	0	r-	Performance Monitor Counter 18
hpmcounter19	32	0	r-	Performance Monitor Counter 19
hpmcounter20	32	0	r-	Performance Monitor Counter 20
hpmcounter21	32	0	r-	Performance Monitor Counter 21
hpmcounter22	32	0	r-	Performance Monitor Counter 22
hpmcounter23	32	0	r-	Performance Monitor Counter 23
hpmcounter24	32	0	r-	Performance Monitor Counter 24
hpmcounter25	32	0	r-	Performance Monitor Counter 25
hpmcounter26	32	0	r-	Performance Monitor Counter 26
hpmcounter27	32	0	r-	Performance Monitor Counter 27
hpmcounter28	32	0	r-	Performance Monitor Counter 28
hpmcounter29	32	0	r-	Performance Monitor Counter 29
hpmcounter30	32	0	r-	Performance Monitor Counter 30
hpmcounter31	32	0	r-	Performance Monitor Counter 31
cycleh	32	0	r-	Cycle Counter High
instreth	32	0	r-	Instructions Retired High
hpmcounterh3	32	0	r-	Performance Monitor High 3
hpmcounterh4	32	0	r-	Performance Monitor High 4
hpmcounterh5	32	0	r-	Performance Monitor High 5
hpmcounterh6	32	0	r-	Performance Monitor High 6
hpmcounterh7	32	0	r-	Performance Monitor High 7
hpmcounterh8	32	0	r-	Performance Monitor High 8
hpmcounterh9	32	0	r-	Performance Monitor High 9
hpmcounterh10	32	0	r-	Performance Monitor High 10
hpmcounterh11	32	0	r-	Performance Monitor High 11
hpmcounterh12	32	0	r-	Performance Monitor High 12
hpmcounterh13	32	0	r-	Performance Monitor High 13
hpmcounterh14	32	0	r-	Performance Monitor High 14
hpmcounterh15	32	0	r-	Performance Monitor High 15
hpmcounterh16	32	0	r-	Performance Monitor High 16
hpmcounterh17	32	0	r-	Performance Monitor High 17
hpmcounterh18	32	0	r-	Performance Monitor High 18
hpmcounterh19	32	0	r-	Performance Monitor High 19
hpmcounterh20	32	0	r-	Performance Monitor High 20
hpmcounterh21	32	0	r-	Performance Monitor High 21
hpmcounterh22	32	0	r-	Performance Monitor High 22
hpmcounterh23	32	0	r-	Performance Monitor High 23
hpmcounterh24	32	0	r-	Performance Monitor High 24



hpmcounterh25	32	0	r-	Performance Monitor High 25
hpmcounterh26	32	0	r-	Performance Monitor High 26
hpmcounterh27	32	0	r-	Performance Monitor High 27
hpmcounterh28	32	0	r-	Performance Monitor High 28
hpmcounterh29	32	0	r-	Performance Monitor High 29
hpmcounterh30	32	0	r-	Performance Monitor High 30
hpmcounterh31	32	0	r-	Performance Monitor High 31

Table 14.3: Registers at level 2, type:Hart group:User\_Control\_and\_Status

#### 14.2.4 Machine\_Control\_and\_Status

Registers at level:2, type:Hart group:Machine\_Control\_and\_Status

Name	Bits	Initial-Hex	RW	Description
mstatus	32	0	rw	Machine Status
misa	32	40101125	rw	ISA and Extensions
mie	32	0	rw	Machine Interrupt Enable
mtvec	32	0	rw	Machine Trap-Vector Base-Address
mcounteren	32	0	rw	Machine Counter Enable
mcountinhibit	32	0	rw	Machine Counter Inhibit
mhpmevent3	32	0	rw	Machine Performance Monitor Event Select 3
mhpmevent4	32	0	rw	Machine Performance Monitor Event Select 4
mhpmevent5	32	0	rw	Machine Performance Monitor Event Select 5
mhpmevent6	32	0	rw	Machine Performance Monitor Event Select 6
mhpmevent7	32	0	rw	Machine Performance Monitor Event Select 7
mhpmevent8	32	0	rw	Machine Performance Monitor Event Select 8
mhpmevent9	32	0	rw	Machine Performance Monitor Event Select 9
mhpmevent10	32	0	rw	Machine Performance Monitor Event Select 10
mhpmevent11	32	0	rw	Machine Performance Monitor Event Select 11
mhpmevent12	32	0	rw	Machine Performance Monitor Event Select 12
mhpmevent13	32	0	rw	Machine Performance Monitor Event Select 13
mhpmevent14	32	0	rw	Machine Performance Monitor Event Select 14
mhpmevent15	32	0	rw	Machine Performance Monitor Event Select 15
mhpmevent16	32	0	rw	Machine Performance Monitor Event Select 16
mhpmevent17	32	0	rw	Machine Performance Monitor Event Select 17
mhpmevent18	32	0	rw	Machine Performance Monitor Event Select 18
mhpmevent19	32	0	rw	Machine Performance Monitor Event Select 19
mhpmevent20	32	0	rw	Machine Performance Monitor Event Select 20
mhpmevent21	32	0	rw	Machine Performance Monitor Event Select 21
mhpmevent22	32	0	rw	Machine Performance Monitor Event Select 22
mhpmevent23	32	0	rw	Machine Performance Monitor Event Select 23
mhpmevent24	32	0	rw	Machine Performance Monitor Event Select 24
mhpmevent25	32	0	rw	Machine Performance Monitor Event Select 25
mhpmevent26	32	0	rw	Machine Performance Monitor Event Select 26
mhpmevent27	32	0	rw	Machine Performance Monitor Event Select 27
mhpmevent28	32	0	rw	Machine Performance Monitor Event Select 28
mhpmevent29	32	0	rw	Machine Performance Monitor Event Select 29
mhpmevent30	32	0	rw	Machine Performance Monitor Event Select 30
mhpmevent31	32	0	rw	Machine Performance Monitor Event Select 31
mscratch	32	0	rw	Machine Scratch
mepc	32	0	rw	Machine Exception Program Counter
mcause	32	0	rw	Machine Cause
mtval	32	0	rw	Machine Trap Value
mip	32	0	rw	Machine Interrupt Pending
mnscratch	32	0	rw	Machine RNMI Scratch

mnepc	32	0	rw	Machine RNMI Program Counter
mncause	32	0	rw	Machine RNMI Cause
mnstatus	32	8	rw	Machine RNMI Status
pmpcfg0	32	0	rw	Physical Memory Protection Configuration 0
pmpcfg1	32	0	rw	Physical Memory Protection Configuration 1
pmpcfg2	32	0	rw	Physical Memory Protection Configuration 2
pmpcfg3	32	0	rw	Physical Memory Protection Configuration 3
pmpaddr0	32	0	rw	Physical Memory Protection Address 0
pmpaddr1	32	0	rw	Physical Memory Protection Address 1
pmpaddr2	32	0	rw	Physical Memory Protection Address 2
pmpaddr3	32	0	rw	Physical Memory Protection Address 3
pmpaddr4	32	0	rw	Physical Memory Protection Address 4
pmpaddr5	32	0	rw	Physical Memory Protection Address 5
pmpaddr6	32	0	rw	Physical Memory Protection Address 6
pmpaddr7	32	0	rw	Physical Memory Protection Address 7
pmpaddr8	32	0	rw	Physical Memory Protection Address 8
pmpaddr9	32	0	rw	Physical Memory Protection Address 9
pmpaddr10	32	0	rw	Physical Memory Protection Address 10
pmpaddr11	32	0	rw	Physical Memory Protection Address 11
pmpaddr12	32	0	rw	Physical Memory Protection Address 12
pmpaddr13	32	0	rw	Physical Memory Protection Address 13
pmpaddr14	32	0	rw	Physical Memory Protection Address 14
pmpaddr15	32	0	rw	Physical Memory Protection Address 15
featureDisable*	32	0	rw	SiFive FeatureDisable
mcycle	32	0	rw	Machine Cycle Counter
minstret	32	0	rw	Machine Instructions Retired
mhpmcounter3	32	0	rw	Machine Performance Monitor Counter 3
mhpmcounter4	32	0	rw	Machine Performance Monitor Counter 4
mhpmcounter5	32	0	rw	Machine Performance Monitor Counter 5
mhpmcounter6	32	0	rw	Machine Performance Monitor Counter 6
mhpmcounter7	32	0	rw	Machine Performance Monitor Counter 7
mhpmcounter8	32	0	rw	Machine Performance Monitor Counter 8
mhpmcounter9	32	0	rw	Machine Performance Monitor Counter 9
mhpmcounter10	32	0	rw	Machine Performance Monitor Counter 10
mhpmcounter11	32	0	rw	Machine Performance Monitor Counter 11
mhpmcounter12	32	0	rw	Machine Performance Monitor Counter 12
mhpmcounter13	32	0	rw	Machine Performance Monitor Counter 13
mhpmcounter14	32	0	rw	Machine Performance Monitor Counter 14
mhpmcounter15	32	0	rw	Machine Performance Monitor Counter 15
mhpmcounter16	32	0	rw	Machine Performance Monitor Counter 16
mhpmcounter17	32	0	rw	Machine Performance Monitor Counter 17
mhpmcounter18	32	0	rw	Machine Performance Monitor Counter 18
mhpmcounter19	32	0	rw	Machine Performance Monitor Counter 19
mhpmcounter20	32	0	rw	Machine Performance Monitor Counter 20
mhpmcounter21	32	0	rw	Machine Performance Monitor Counter 21
mhpmcounter22	32	0	rw	Machine Performance Monitor Counter 22
mhpmcounter23	32	0	rw	Machine Performance Monitor Counter 23
mhpmcounter24	32	0	rw	Machine Performance Monitor Counter 24
mhpmcounter25	32	0	rw	Machine Performance Monitor Counter 25
mhpmcounter26	32	0	rw	Machine Performance Monitor Counter 26
mhpmcounter27	32	0	rw	Machine Performance Monitor Counter 27
mhpmcounter28	32	0	rw	Machine Performance Monitor Counter 28
mhpmcounter29	32	0	rw	Machine Performance Monitor Counter 29
mhpmcounter30	32	0	rw	Machine Performance Monitor Counter 30
mhpmcounter31	32	0	rw	Machine Performance Monitor Counter 31
mcycleh	32	0	rw	Machine Cycle Counter High

minstreth	32	0	rw	Machine Instructions Retired High
mhpmcounterh3	32	0	rw	Machine Performance Monitor Counter High 3
mhpmcounterh4	32	0	rw	Machine Performance Monitor Counter High 4
mhpmcounterh5	32	0	rw	Machine Performance Monitor Counter High 5
mhpmcounterh6	32	0	rw	Machine Performance Monitor Counter High 6
mhpmcounterh7	32	0	rw	Machine Performance Monitor Counter High 7
mhpmcounterh8	32	0	rw	Machine Performance Monitor Counter High 8
mhpmcounterh9	32	0	rw	Machine Performance Monitor Counter High 9
mhpmcounterh10	32	0	rw	Machine Performance Monitor Counter High 10
mhpmcounterh11	32	0	rw	Machine Performance Monitor Counter High 11
mhpmcounterh12	32	0	rw	Machine Performance Monitor Counter High 12
mhpmcounterh13	32	0	rw	Machine Performance Monitor Counter High 13
mhpmcounterh14	32	0	rw	Machine Performance Monitor Counter High 14
mhpmcounterh15	32	0	rw	Machine Performance Monitor Counter High 15
mhpmcounterh16	32	0	rw	Machine Performance Monitor Counter High 16
mhpmcounterh17	32	0	rw	Machine Performance Monitor Counter High 17
mhpmcounterh18	32	0	rw	Machine Performance Monitor Counter High 18
mhpmcounterh19	32	0	rw	Machine Performance Monitor Counter High 19
mhpmcounterh20	32	0	rw	Machine Performance Monitor Counter High 20
mhpmcounterh21	32	0	rw	Machine Performance Monitor Counter High 21
mhpmcounterh22	32	0	rw	Machine Performance Monitor Counter High 22
mhpmcounterh23	32	0	rw	Machine Performance Monitor Counter High 23
mhpmcounterh24	32	0	rw	Machine Performance Monitor Counter High 24
mhpmcounterh25	32	0	rw	Machine Performance Monitor Counter High 25
mhpmcounterh26	32	0	rw	Machine Performance Monitor Counter High 26
mhpmcounterh27	32	0	rw	Machine Performance Monitor Counter High 27
mhpmcounterh28	32	0	rw	Machine Performance Monitor Counter High 28
mhpmcounterh29	32	0	rw	Machine Performance Monitor Counter High 29
mhpmcounterh30	32	0	rw	Machine Performance Monitor Counter High 30
mhpmcounterh31	32	0	rw	Machine Performance Monitor Counter High 31
mvendorid	32	489	r-	Vendor ID
marchid	32	80000007	r-	Architecture ID
mimpid	32	4210427	r-	Implementation ID
mhartid	32	0	r-	Hardware Thread ID

Table 14.4: Registers at level 2, type:Hart group:Machine\_Control\_and\_Status

\* Registers marked with an asterisk are part of the processor extension library.

### 14.2.5 Integration\_support

Registers at level:2, type:Hart group:Integration\_support

Name	Bits	Initial-Hex	RW	Description
LRSCAddress	32	ffffff	rw	LR/SC active lock address
commercial	8	0	r-	Commercial feature in use
ASYNCPPE	8	0	r-	Asynchronous Event Pending & Enabled
mask_pmpcfg0	64	ffffff fffffff	r-	Write mask for pmpcfg0
mask_pmpcfg1	32	ffffff	r-	Write mask for pmpcfg1
mask_pmpaddr0	64	ffffff fffffff	r-	Write mask for pmpaddr0
mask_pmpaddr1	64	ffffff fffffff	r-	Write mask for pmpaddr1
mask_pmpaddr2	64	ffffff fffffff	r-	Write mask for pmpaddr2
mask_pmpaddr3	64	ffffff fffffff	r-	Write mask for pmpaddr3
mask_pmpaddr4	64	ffffff fffffff	r-	Write mask for pmpaddr4
mask_pmpaddr5	64	ffffff fffffff	r-	Write mask for pmpaddr5

mask_pmpaddr6	64	ffffff fffffff	r-	Write mask for pmpaddr6
mask_pmpaddr7	64	ffffff fffffff	r-	Write mask for pmpaddr7

Table 14.5: Registers at level 2, type:Hart group:Integration.support